


Connecting to RSWR-400 RFID Reader

IMPORTANT: When starting the RSWR-400 for the first time, the only connection available is the Wi-Fi.

To use the Ethernet jack, the input must be changed in the Network menu.

1) Find the RSWR-400 on your Wi-Fi list

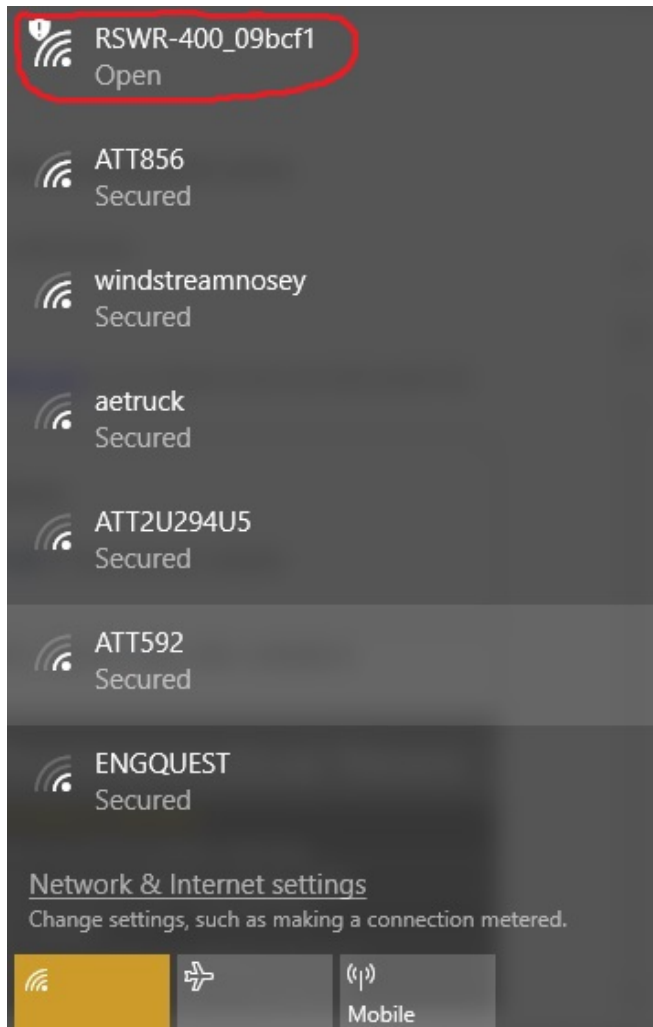

2) Connect to the RSWR-400 by clicking on it. A password is not needed.

Connecting to RSWR-400 RFID Reader

- 3) Once connected, open a web browser and enter 192.168.1.1 into the address bar. You will see the following screen:



Log into Radiant Sensors

Radiant Sensors UHF RFID Reader

Username

Password


Log in

02:11:28 up 2:11, load average: 0.51, 0.18, 0.09

©2010-2017 Radiant Sensors. All rights reserved.

- 4) User Name is admin
5) Password is admin. Click on "log in" button.
6) You will then see the main screen

Connecting to RSWR-400 RFID Reader

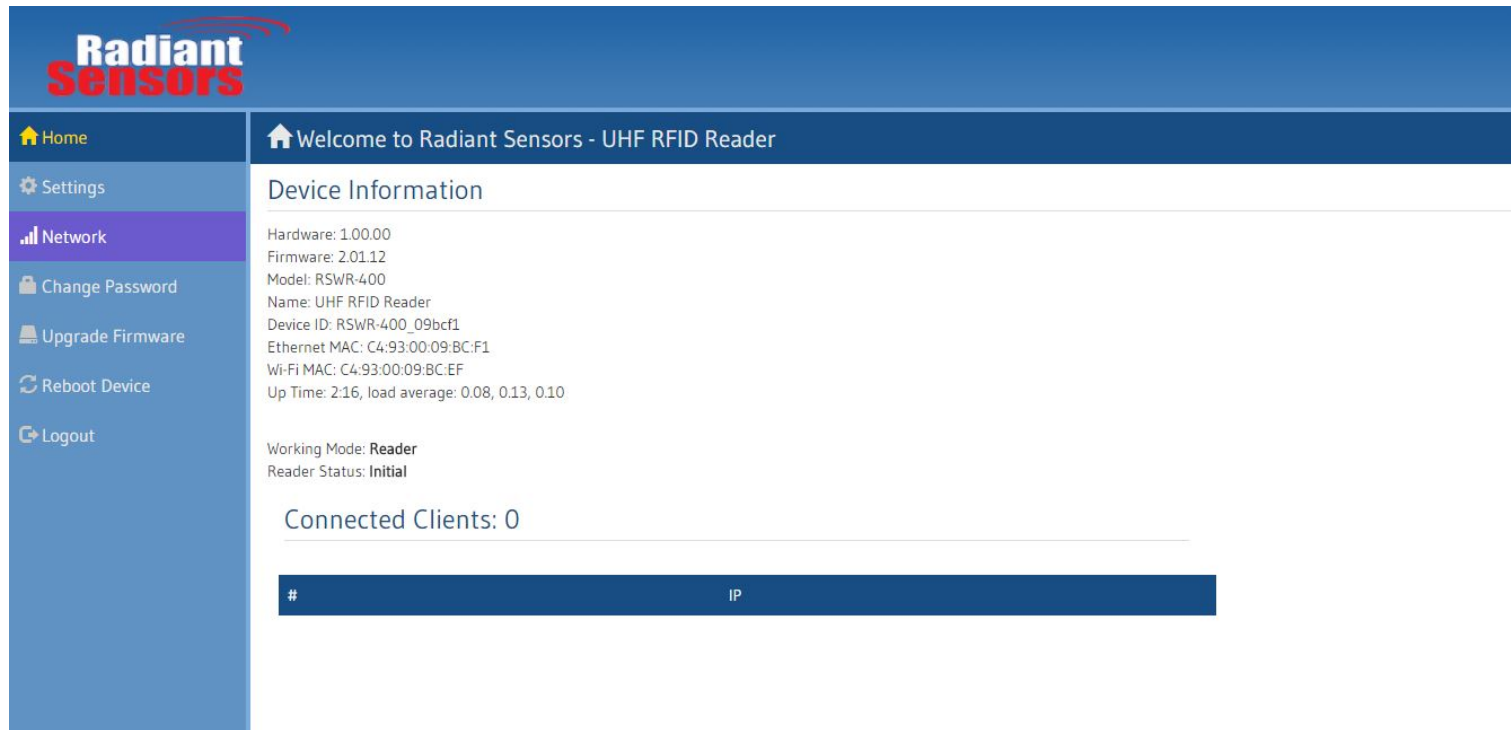

The screenshot displays the web interface for a Radiant Sensors UHF RFID Reader. The interface includes a navigation sidebar on the left with options: Home, Settings, Network (highlighted), Change Password, Upgrade Firmware, Reboot Device, and Logout. The main content area shows the following information:

Welcome to Radiant Sensors - UHF RFID Reader

Device Information

Hardware: 1.00.00
Firmware: 2.01.12
Model: RSWR-400
Name: UHF RFID Reader
Device ID: RSWR-400_09bcf1
Ethernet MAC: C4:93:00:09:BC:F1
Wi-Fi MAC: C4:93:00:09:BC:EF
Up Time: 2:16, load average: 0.08, 0.13, 0.10

Working Mode: **Reader**
Reader Status: **Initial**

Connected Clients: 0

#	IP
---	----